


# Assembly Instructions for Bulkheads

- STEP 1.** Bolt any split bulkhead together using 3/8" x 4 1/2" bolts with washers and nuts through predrilled holes.
- STEP 2.** Put bulkhead in place.
- STEP 3.** Have electrician and plumber make the final connections to the electrical panels and water lines.
- STEP 4.** Hook up all washers.
- STEP 5.** Install top panels by placing 4' long sections first, then using shorter pieces provided to fill.
- STEP 6.** Install end panels and/or access panels using 1 1/2" self-tapping pan head screws in predrilled holes. Make sure to leave 3/4" reveal at the top and equal reveal on each side (unless ordered to fit differently).

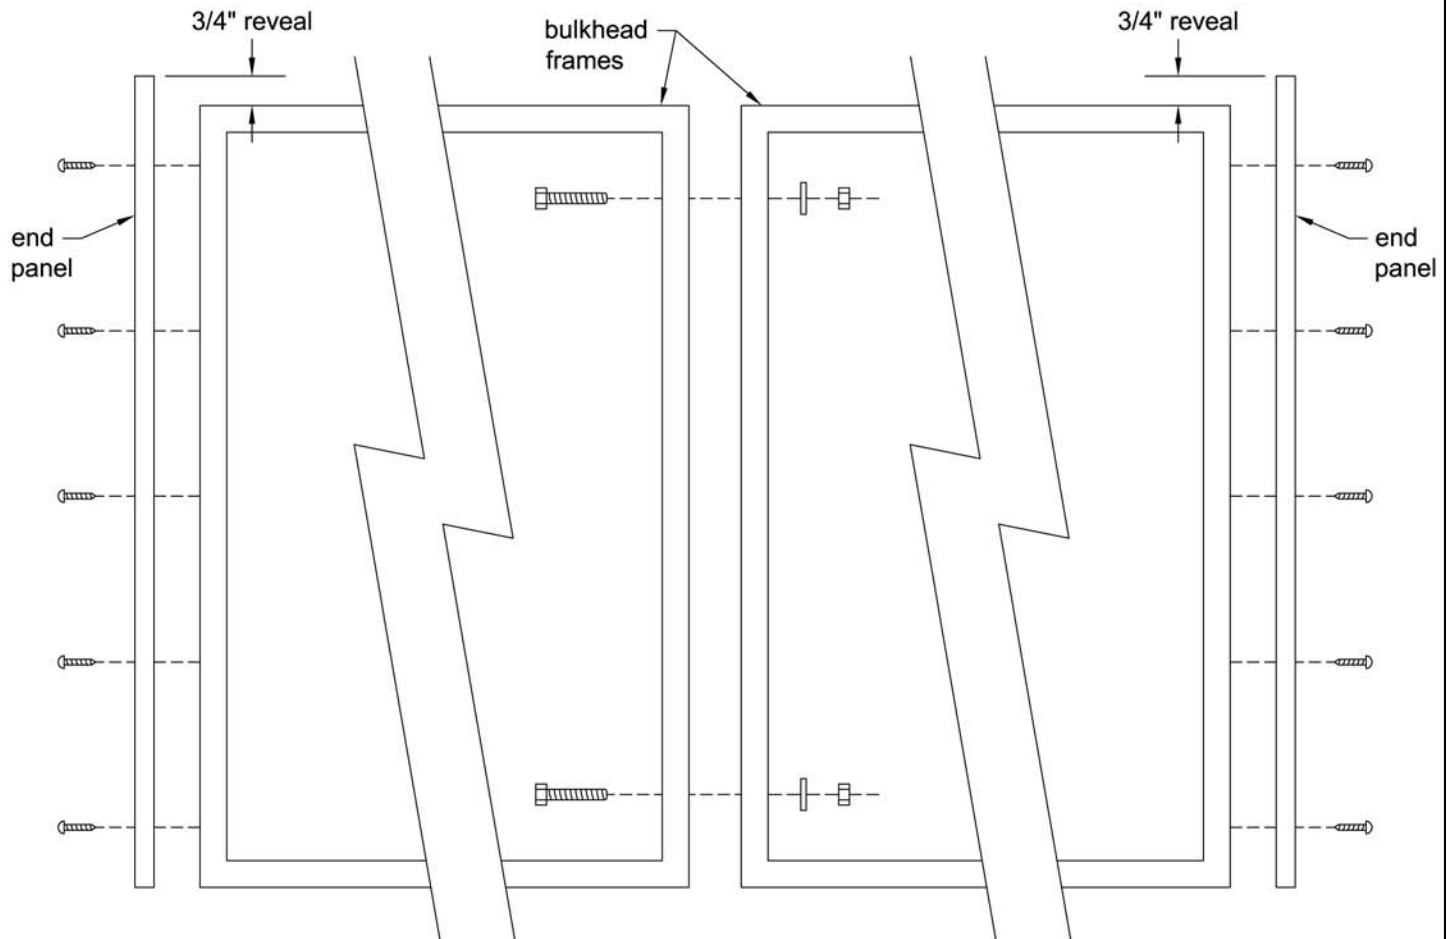

## NOTES:

- All top panels and end panels are 3/4" thick.
- All side panels are 1/4" thick and usually come preinstalled.
- All top panels are 4' long except fill pieces.
- Screws for end panels are 1 1/2" self-tapping phillips pan head screws.
- Screws for side panels (if needed) are 3/4" self-tapping phillips pan head screws.



UL documentation is on hand at the factory available upon request.